

OIL CHANGE

Oil Specifications

Engine	Service interval (km/miles)	Volume (litres)	Grade	Viscosity	Part number
D5252T	(15,000 / 20,000)	(Approx. 5.2)	ACEA A3/B3/B4	SAE 5W-40	1161630, -631, -639

Oil Change Instructions

Replacing the oil and oil filter

Special tools:

[999 5680](#)

Warning! Do not spill engine oil on the exhaust manifolds. Risk of fire!

Draining oil

Lift up the car and get an oil container.

Remove

- the splash guard under the engine. Place the oil container under the engine's oil sump
- the oil plug. Drain the engine oil

Note! It is easier to drain the oil if the engine is at operating temperature.

Warning! Hot oil can scald. Avoid skin contact with engine oil, particularly if it is dirty. Immediately wash hands and any skin that has been in contact with oil. Use a suitable cleaning agent and warm water. Wear gloves when working with engine oil.

Install


- the oil plug with new washer. Tighten with **40 Nm**

Note! Always use a new sealing washer.

- the protective cover under the engine.

Removing the oil filter

Remove the engine cover.

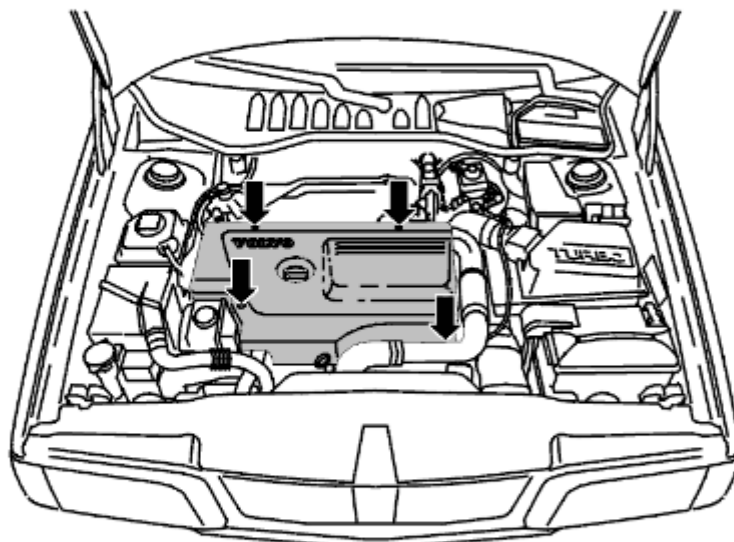

Note! Lay a paper under

Revision #4

Created 2025-06-21 18:00:50 UTC by Kyle Robertson

Updated 2025-11-20 09:11:14 UTC by Kyle Robertson